


TW17

TRANSFER WEEDER

QUICK START GUIDE




BEFORE YOU START

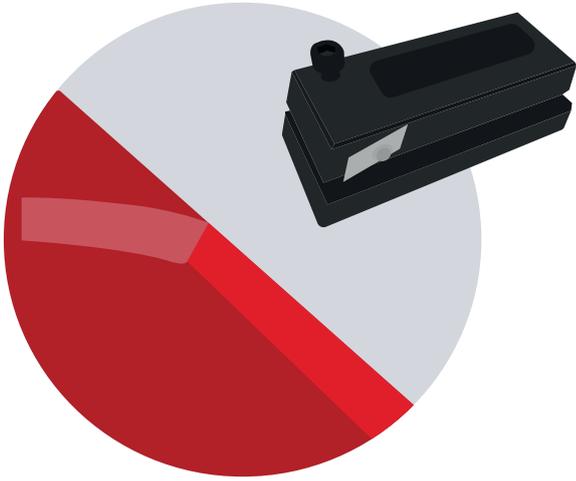

TOPRIZZZ

Use your TOPRIZZZ to remove the first piece of the liner, as shown.

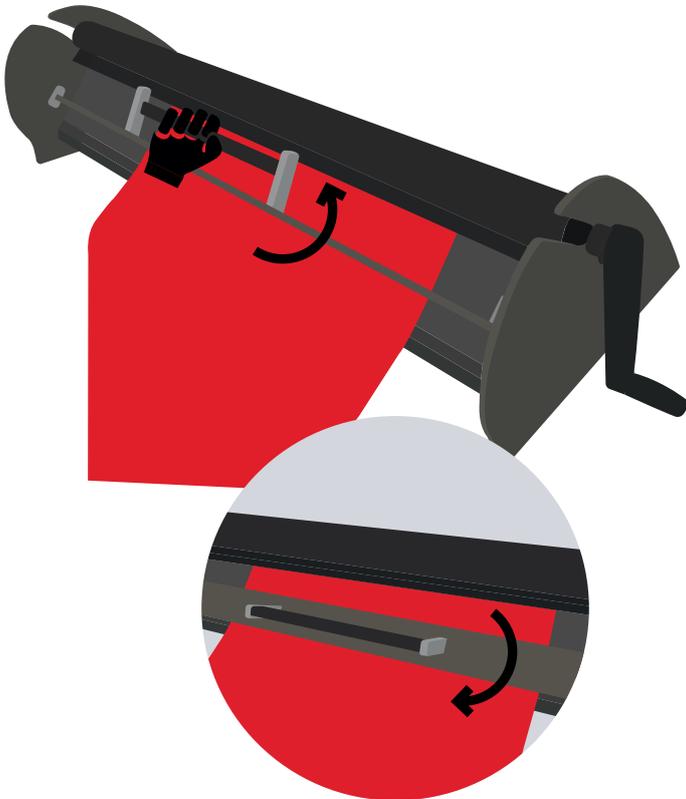


PLACE YOUR TRANSFER

Open the clamp and place your transfer into your TW17. The liner should be facing downwards. Close the clamp so your transfer is hold firmly in place.



Scan the code for video demonstrations on YouTube

QUICK START

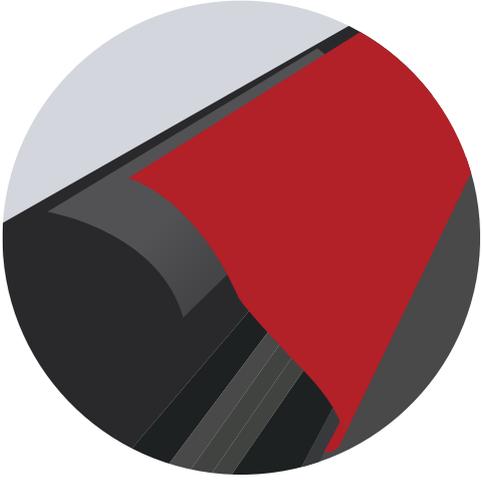

APPLY TO THE CORE

Pull the media to the core of your TW17, and stick the top of the transfer to the tape on the core.



PULL THE LINER

With the transfer fastened to the core, you can pull the liner down to your working table.



TURN THE HANDLE

Make sure everything is tight. You can now turn the handle, and watch while your TW17 weeds your job in no time.

TEMPERATURE TEST

B-FLEX

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
Gimme5	Yes	55
Flock	No	-
BF Print Mat	Yes	28
BF Print Gloss	Yes	28

STAHL

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
Sportsfilm ekstra	Yes	50
Sportsfilm Plus	Yes	50
3D silicon 200my	Yes	28
3D silicon 500my	Yes	28


SISER

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
P.S Film	Yes	50
P.S Film+	Yes	50
Moda Glitter 2	Yes	45

THE MAGIC TOUCH

TYPE	RECOMENDED	OPTIMAL TEMPERATURE °C
123 Flex	Yes	45
123PremiumFlex	Yes	50

We have tested different materials with different temperatures and made the recommendations above. Please note that you might have to try other settings depending on your material and type of job to get the perfect result.

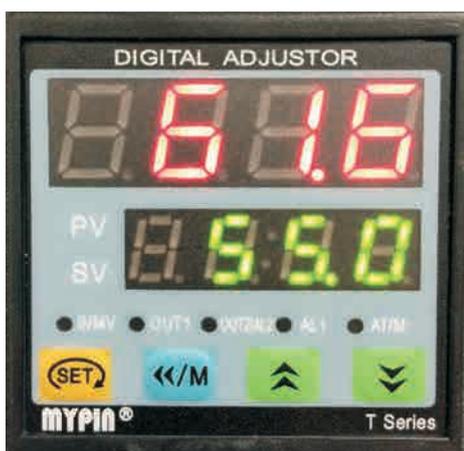

Press (2)  to start setting the temperature

Press (3)  or (4)  to adjust the temperature up/down.

Press (2)  again to shift between digits.

Press (1)  to set, and save the temperature setting